




## How to fit Civic EP3 Area Motorsport Cast Top Mounts onto Yellow Speed Coilovers.



1. Disassemble the YSR by removing the 21mm (M14) nut on the top of the damper.



2. If you have an older set of dampers with M12 top nuts the setup will look slightly different, and the spring top seat will also be different. To fit the Area Top Mount the components should be put together in this order.

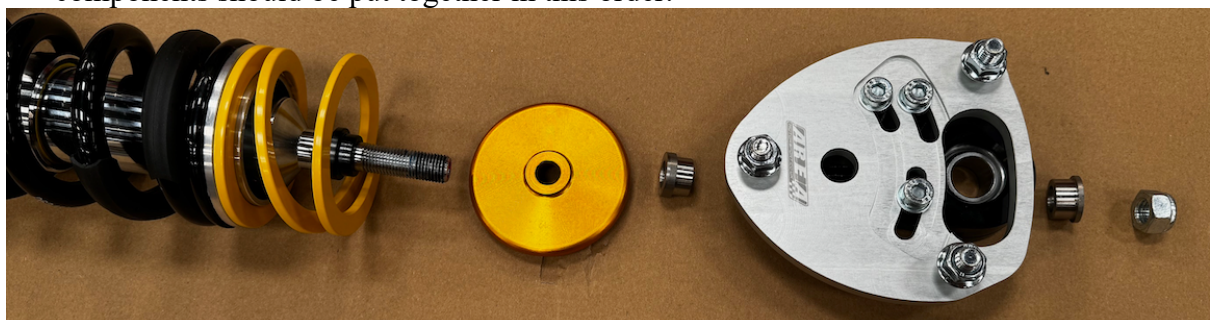





3. On the M14 (21mm socket) top mounts (all Inverted dampers have been this since 2017) the components should be put together in this order.



4. Please note that the top hat inserts **MUST** be installed the correct way around otherwise the top mount will rub on the spring carrier/seat.

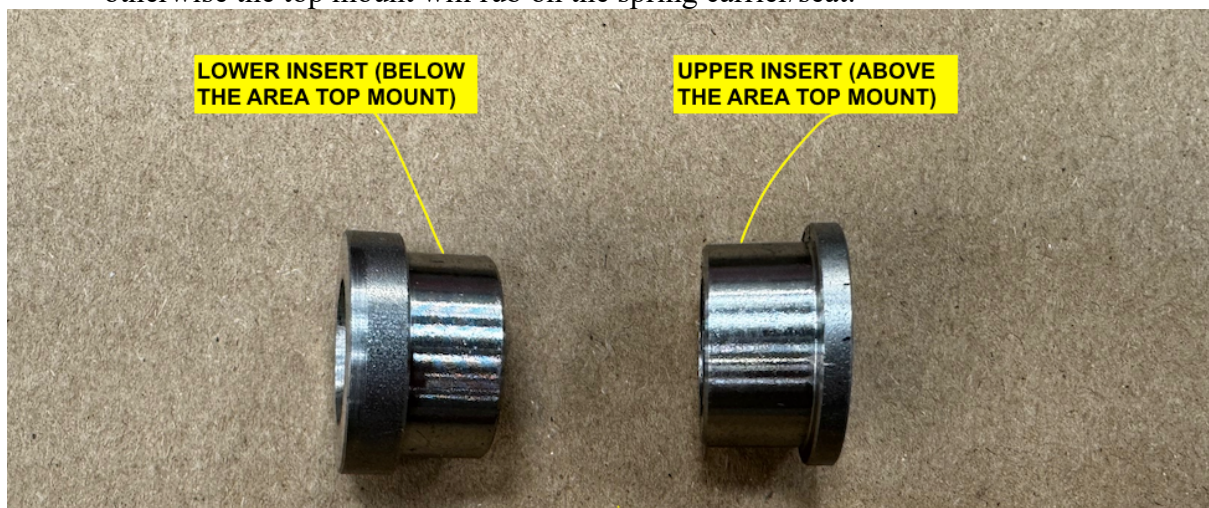

5. The lower insert measures 5.1mm and the upper measures 2.6mm.

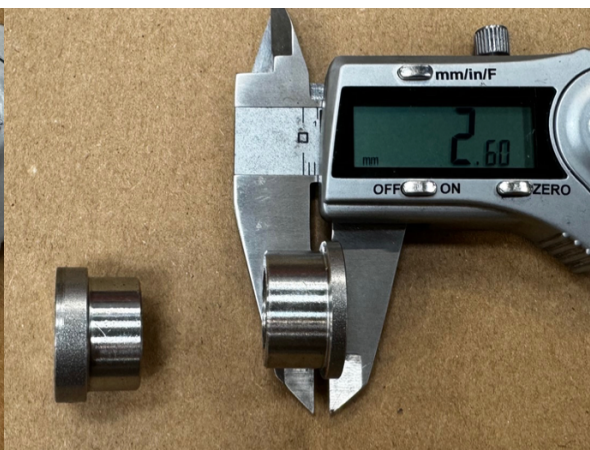



**Any deviation from this will cause premature failure. If you have already fitted the top mounts in a different way, please correct it and contact Yellow Speed Racing Europe or Area Motorsport if you need to buy any of the components.**

<https://www.tegiwa.com/products/ysr-premium-competition-coilovers-honda-civic-ep3-03-05-type-r-inverted>

<https://www.tegiwa.com/products/area-motorsport-caster-top-mounts-civic-ep3-integra-dc5-type-r-14mm-for-inverted-ysr-coilovers>