



## TSX / ACCORD Shifter

KTD-TSX-ACC


### K20Z3 Shifter Setup

#### Setup for K20Z3 Trans

- 1 - Move the side cable bracket to rear position (See arrow B)
- 2 - Switch cable end to Delrin Locking Ball (See arrow C)

**Note:** Cable bracket at Arrow A does not need to be moved.

Use rear bracket for K20Z3 cables.

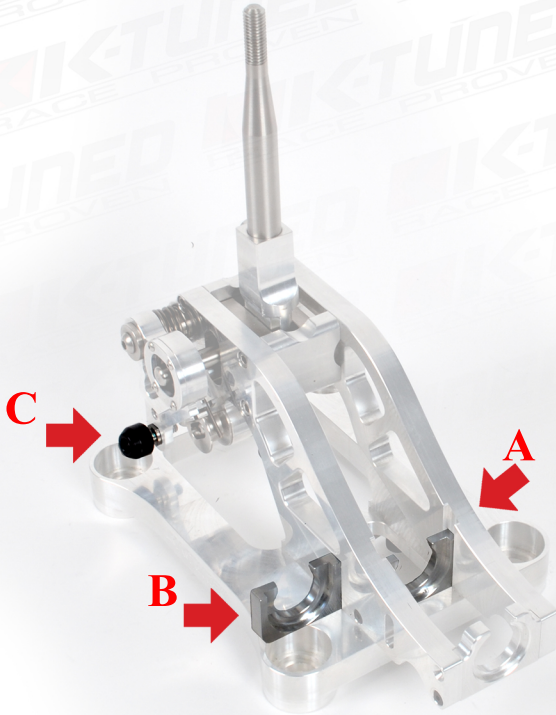

### TSX / Accord Shifter Setup

#### Setup for TSX / Accord (This is how it ships)

- 1 - Move the side cable bracket to front position (See arrow B)
- 2 - Switch cable end to Cable Locking Pin (See arrow C)

**Note:** Cable bracket at Arrow A does not need to be moved.

Use front bracket for TSX / Accord cables.

