

TEGIWA

I M P O R T S



- Now place the base of the insert as shown in. To make this easy have the scuttle so that it is facing the same way as it would on the car with you looking at it from the front. Have the insert facing the same way as it is in the photo Fig.5.




- Now push the insert vertically up and then twist it so it sits flat. Fig.6 (this can only go in one way so do not force it, it should be easy to fit).

TEGIWA

I M P O R T S



- Now push each end in on top of the plate as shown in Fig.6. These again can only go in 1 way so do not force them. They should push in easily. Fig.6 shows the way they should sit if the plate is facing the same way as it would on the car with you looking at it from the front of the car.

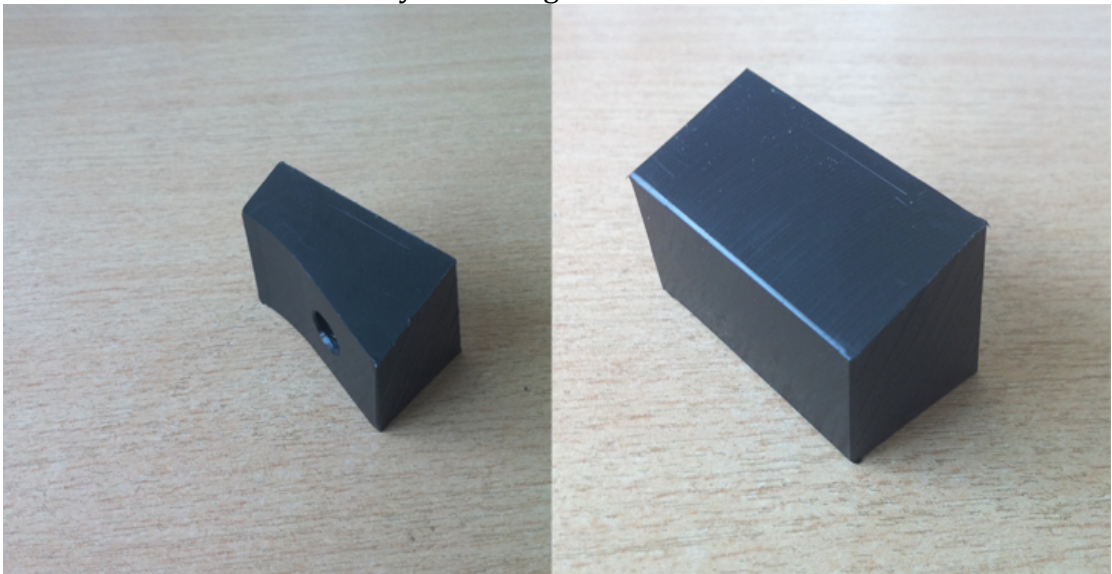

- Push the end blocks in until they are flush with your cut out and the M8 holes you drilled..

TEGIWA

I M P O R T S



- Bolt the scoop on.
- Drill the bottom holes with an M6 drill and bolt on using the M6 nuts provided for the rear.
- Fit your scuttle plate back on your car.

If you have any questions about this or any of our other products please email us on websales@tegiwaimports.com and we will be happy to help.