



## Civic 07-11 (FN/FK etc) Fog Light Scoops


Tools needed:

Ratchet and 10mm socket, 10mm spanner

Cross head screwdriver

Pliers, flat head screwdriver, copper grease

- To fit your scoops you will need to remove the front bumper, so the main part of this guide focusses on this. If you have a Tegiwa screw-in tow hook you will need to remove this first. Firstly you need to remove the clips and the screw from the arch extensions. It is hard to photo from the underside but here is it pulled apart.

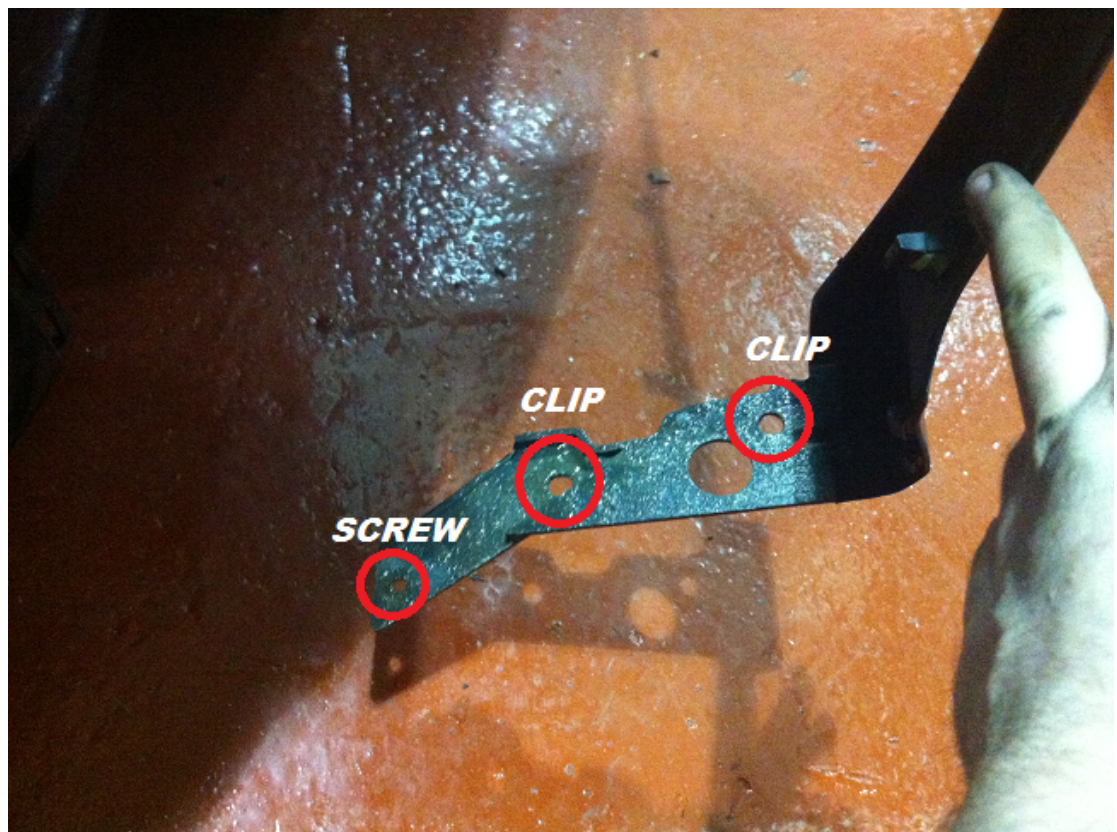


# TEGIWA

I M P O R T S

- When the clips and screw are removed, unclip the arch extension by pulling it out to the side until you can see this screw holding the bumper on.



- Undo this screw, and repeat the other side. Next go under the car and remove the bolts and clips under the bumper. Again, here is a picture of it off the car to make it easier to show:

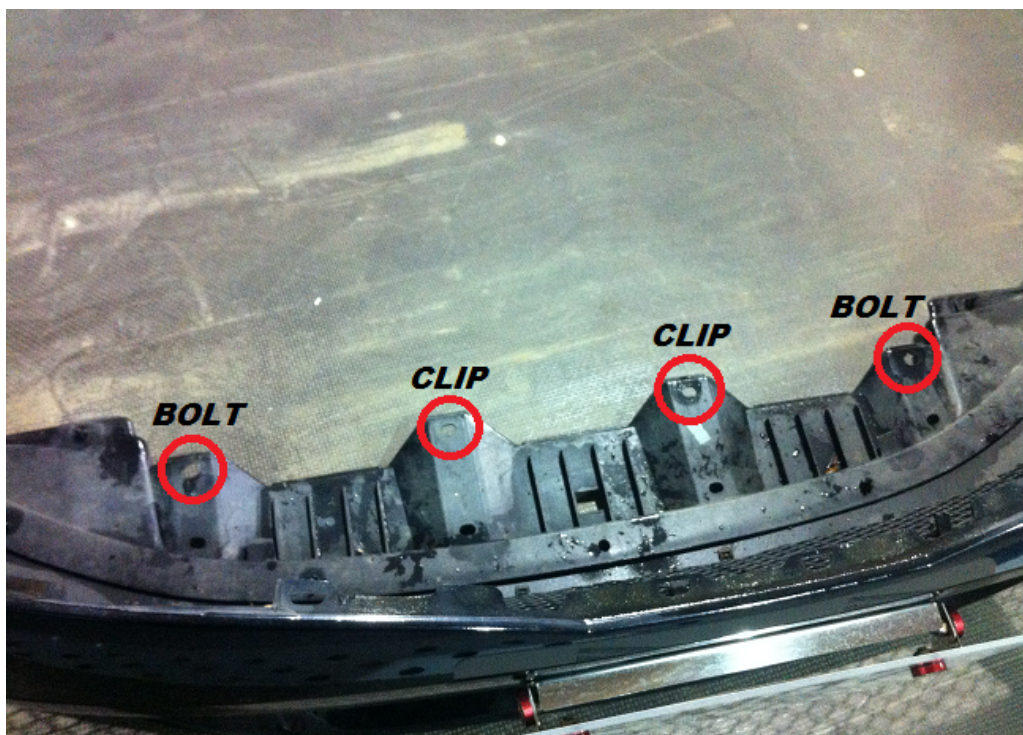



# TEGIWA

I M P O R T S

- Remove the bumper from the car by pulling it firmly away from the car, out to the sides first then off the front as shown in the pictures below. Take care to unplug the fog lights before you pull it away from the car.



# TEGIWA

I M P O R T S

- Place the bumper on something soft and remove the fog lights by unscrewing the 10mm bolt and pulling them out of the front of the bumper.



- Fit the fog scoops into the holes using the 10mm bolts, nuts and washer supplied. Make sure they are tight into the bumper before you tighten the bolt.





- Refit your bumper and arch extensions, this is much easier with a friend to help you.

If you have any questions about this or any of our other products please email us on [info@tegiwaimports.com](mailto:info@tegiwaimports.com) and we will be happy to help.